

RF remote control

VIZMOTE 1

VIZMOTE 5




1 channel and 5 channel RF Remote control

list of components:

1. Remote
2. Battery
3. Wall holder
4. manual




VIZMOTE 1 and VIZMOTE 5 description:

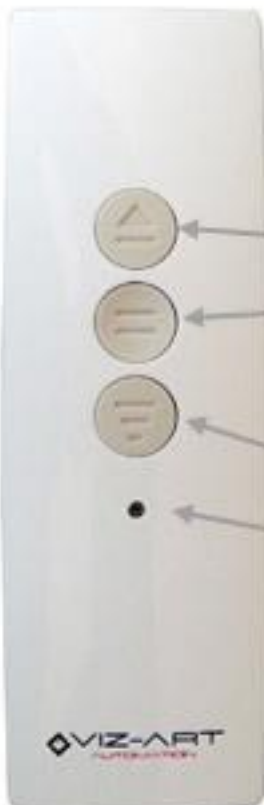

VIZMOTE 1 -
1-channel
remote control


Buttons:

1. Up
2. STOP
3. Channel +
4. Channel -
5. Down
6. Channel LED indicator

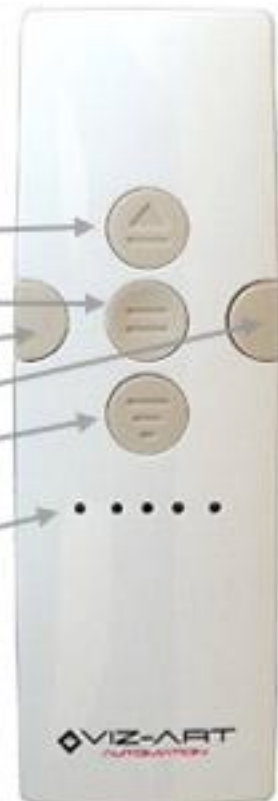

VIZMOTE 5
5-channel
remote control

Before use:

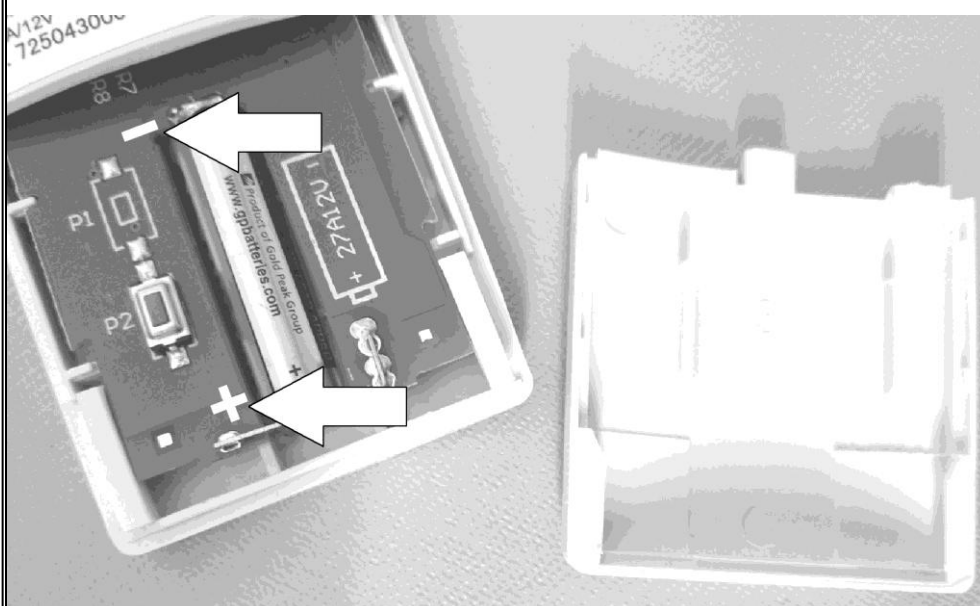

To activate remote control, place 27A type battery (included) according to correct polarity.

Pairing:

To pair RF remote control VIZMOTE 1 / VIZMOTE 5 with RF receiver press „UP” button when receiver Works in „pairing mode”.

Technical specification:

Input Voltage	12V/27A battery type
Emission Power	0,1 W
Frequency	433,92 MHz +/-100kHz
Work temperature	10-50 °C
Range:	open 100m two walls 30m

Manufactured by: VIZ-ART Automation
tel.+48 22/6138899 www.viz-art.pl

RF remote control

VIZMOTE 1

VIZMOTE 5



1 channel and 5 channel RF Remote control

list of components:

- 5. Remote
- 6. Battery
- 7. Wall holder
- 8. manual




VIZMOTE 1 and VIZMOTE 5 description:



VIZMOTE 1 -
1-channel
remote control


Buttons:

 - 1. Up
- 2. STOP
- 3. Channel +
- 4. Channel -
- 5. Down
- 6. Channel LED indicator

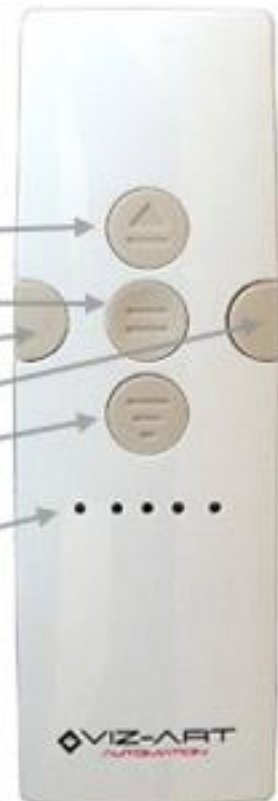

VIZMOTE 5
5-channel
remote control

 Before use:

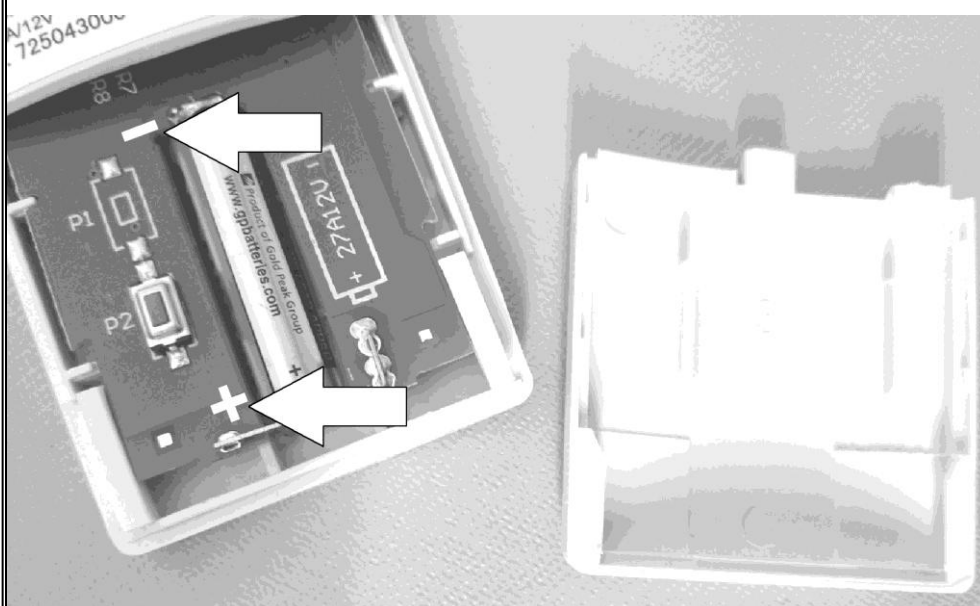

To activate remote control, place 27A type battery (included) according to correct polarity.

Pairing:

To pair RF remote control VIZMOTE 1 / VIZMOTE 5 with RF receiver press „UP” button when receiver Works in „pairing mode”.

Technical specification:

Input Voltage	12V/27A battery type
Emission Power	0,1 W
Frequency	433,92 MHz +/-100kHz
Work temperature	10-50 °C
Range:	open 100m two walls 30m

Manufactured by: VIZ-ART Automation
tel.+48 22/6138899 www.viz-art.pl

RF remote control

VIZMOTE 1

VIZMOTE 5



 
1 channel and 5 channel RF Remote control

list of components:

- 9. Remote
- 10. Battery
- 11. Wall holder
- 12. manual




VIZMOTE 1 and VIZMOTE 5 description:

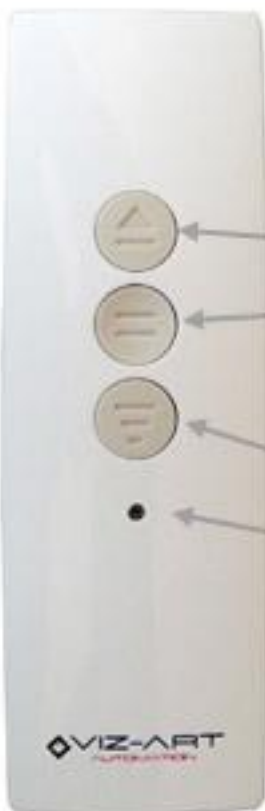

VIZMOTE 1 -
1-channel
remote control


Buttons:

 - 1. Up
- 2. STOP
- 3. Channel +
- 4. Channel -
- 5. Down
- 6. Channel LED indicator

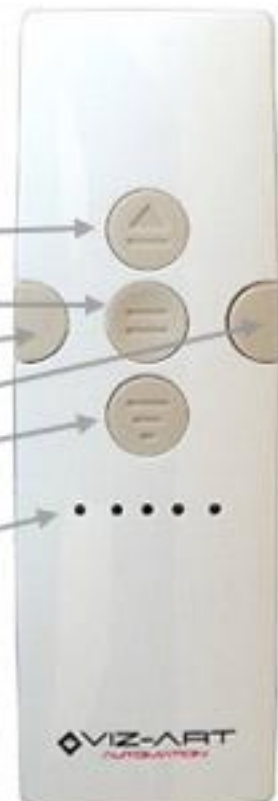

VIZMOTE 5
5-channel
remote control

 Before use:

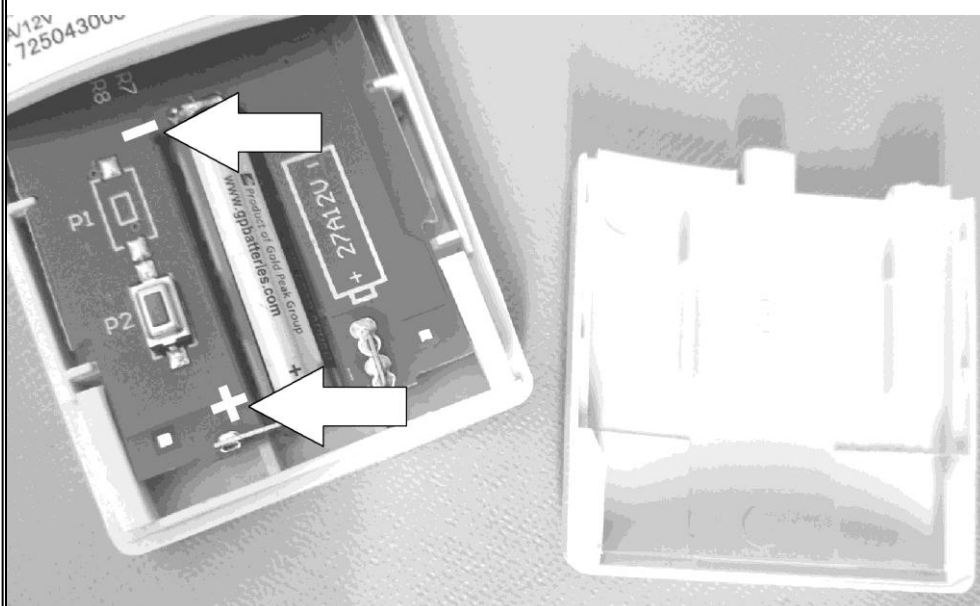

To activate remote control, place 27A type battery (included) according to correct polarity.

Pairing:

To pair RF remote control VIZMOTE 1 / VIZMOTE 5 with RF receiver press „UP” button when receiver Works in „pairing mode”.

Technical specification:

Input Voltage	12V/27A battery type
Emission Power	0,1 W
Frequency	433,92 MHz +/-100kHz
Work temperature	10-50 °C
Range:	open 100m two walls 30m

Manufactured by: VIZ-ART Automation
tel.+48 22/6138899 www.viz-art.pl

RF remote control

VIZMOTE 1

VIZMOTE 5



 
1 channel and 5 channel RF Remote control

list of components:

- 13. Remote
- 14. Battery
- 15. Wall holder
- 16. manual




VIZMOTE 1 and VIZMOTE 5 description:

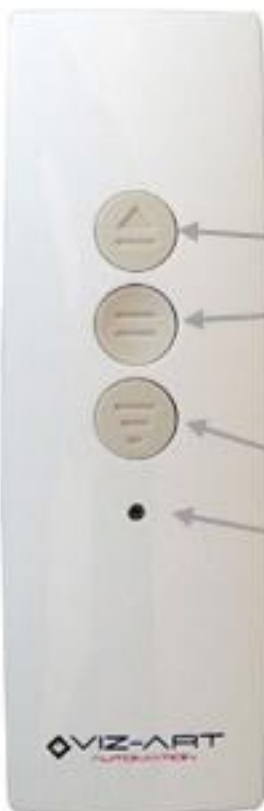

VIZMOTE 1 -
1-channel
remote control


Buttons:

 - 1. Up
- 2. STOP
- 3. Channel +
- 4. Channel -
- 5. Down
- 6. Channel LED indicator

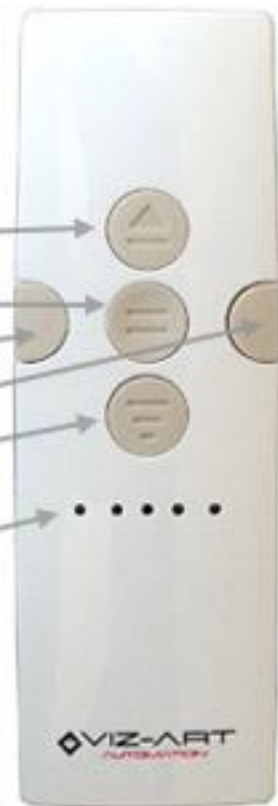

VIZMOTE 5
5-channel
remote control

 Before use:

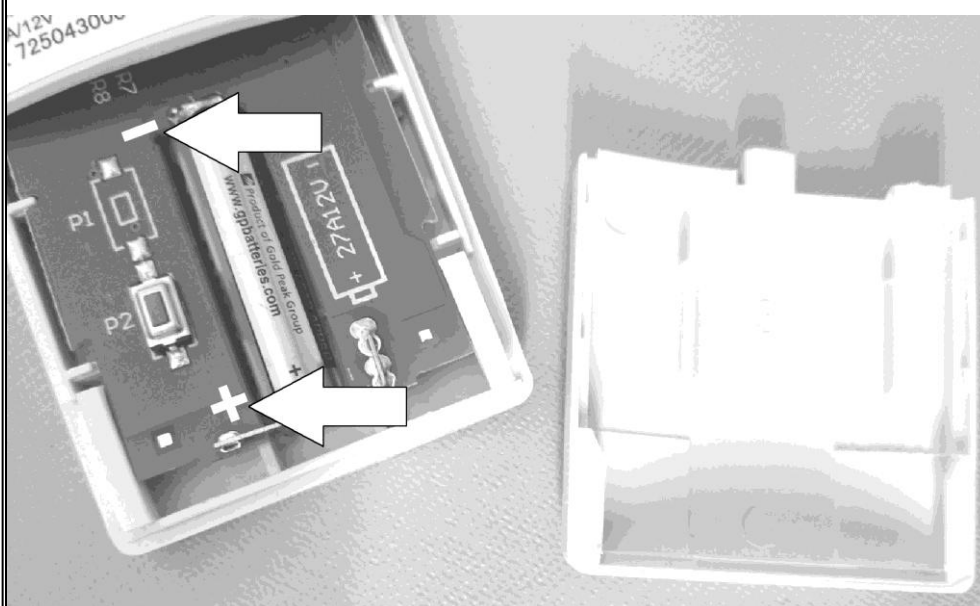

To activate remote control, place 27A type battery (included) according to correct polarity.

Pairing:

To pair RF remote control VIZMOTE 1 / VIZMOTE 5 with RF receiver press „UP” button when receiver Works in „pairing mode”.

Technical specification:

Input Voltage	12V/27A battery type
Emission Power	0,1 W
Frequency	433,92 MHz +/-100kHz
Work temperature	10-50 °C
Range:	open 100m two walls 30m

Manufactured by: VIZ-ART Automation
tel.+48 22/6138899 www.viz-art.pl